


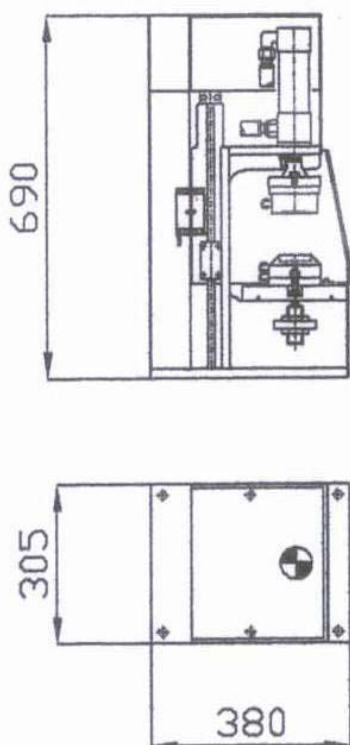

SP-1000P

Hydraulic lab press is semi-automatic soap stamper capable of delivering more than 1000 kg/h of force and therefore capable of stamping any size of soap.

Operation is assured through use of both hands for pressing 2 push buttons.

It is equipped with a cooling channel type die complete with a movable insert and 2 rows of number for marking the sample.

For safety reasons, the transparent cover is electrically interlocked. It has to be down in order to habilitate START push-button.

Both START push-button have to be depressed simultaneously for the press to start. This is done so to engage both hands of the operator guarantying extra safety. Upon releasing the buttons, the die is lifted back up.

Ejector can be moved independently by action on EJECTOR push-button.

DIE key selector puts the machine into die change-over mode. In this mode, the die will not return to initial position upon releasing the START push-button, this allows for easy change over of the die.